

# Windows Upgrade/Installation *AltaAPI, AltaView* and *AltaRTVal*



**MIL-STD-1553 & ARINC-429**


Innovation, Quality and Service

## Step 1 – Uninstall AltaDT Driver

- ▶ The 2.1.3.3+ Release Incorporates and New Driver Technology for Windows, Linux and Solaris Call a “Plug-In.” This greatly enhances interrupt and multi process (one process per channel/device) support and reduces interrupt latencies.
  - This new Plug-In Requires the Old AltaDT Driver to be Removed from the Windows Machine.
  - This is a simple process through Device Manager->Hardware Tab. See Next Slide.

# Example Screen of Device Manager Uninstall AltaDT Driver

Device Manager Can Be Found By Right-Clicking on My Computer on the DeskTop or in the Control Panel->System

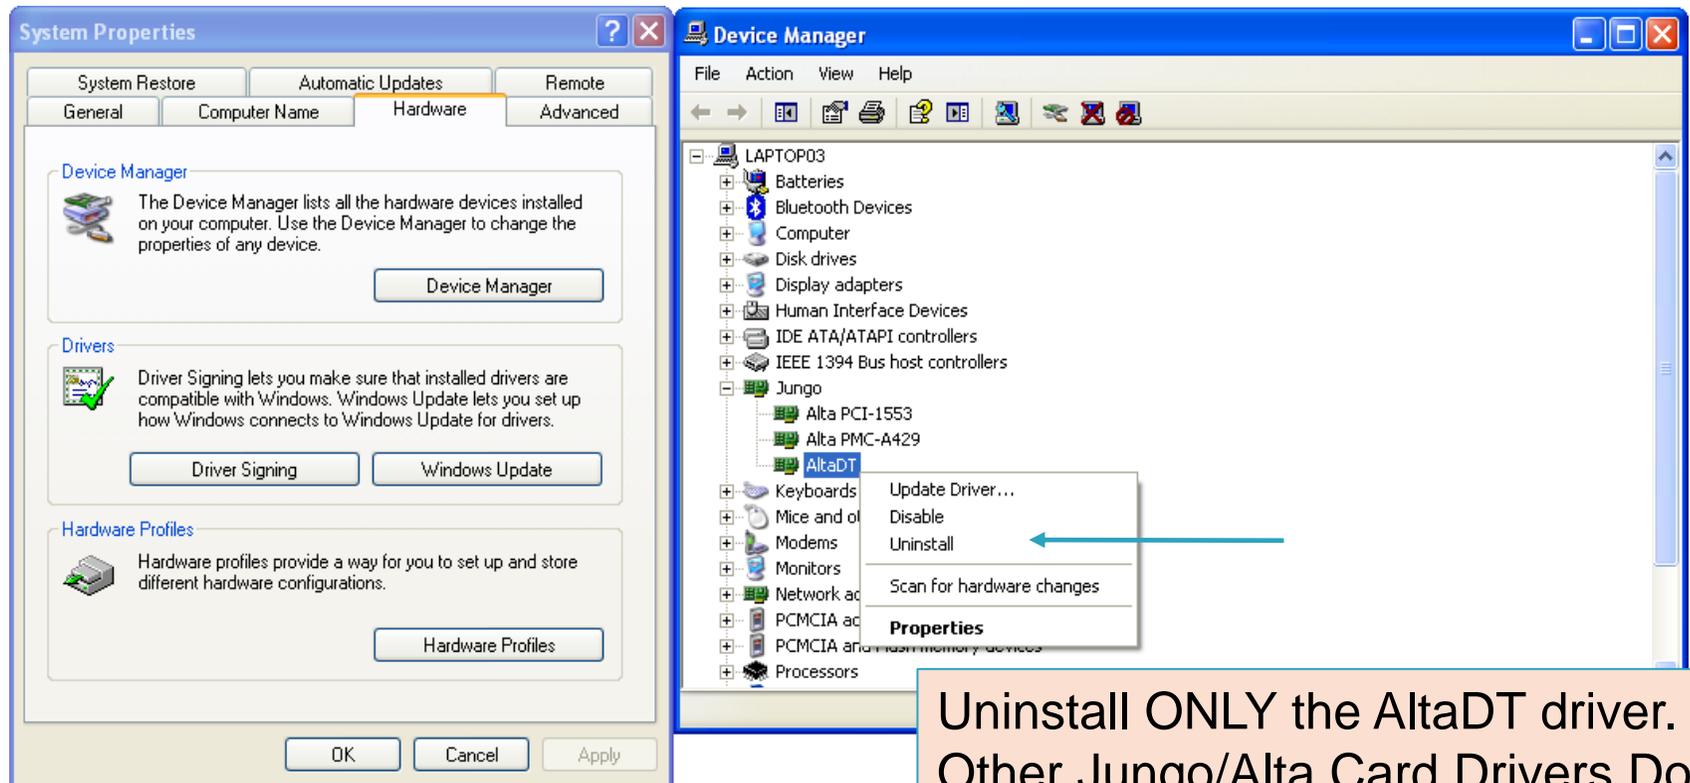

- ▶ From **Control Panel**→**Add/Remove Software**, REMOVE the “**Alta Software**.” This will NOT remove your custom files – it will only remove (uninstall) old Alta Software files.
- ▶ Download and UnZip Alta 2-2-X-X.zip to a Local Folder. Run the “**setup.exe**” file to load 2.2.X-X. This may take several minutes to start installation – be patient.
- ▶ Click through the Next Buttons and Install Software.
- ▶ Reboot Your Computer to Activate New Driver.