



Hardware Manual for PCCARD-A429



Part Number: 15541-00000-A1
Cage Code: 4RK27 • NAICS: 334418

Alta Data Technologies LLC
4901 Rockaway Blvd, Building A
Rio Rancho, NM 87124 USA
(tel) 505-994-3111 • www.altadt.com

CUSTOMER NOTES:

Revision Control History

Rev A1 Release Date: 19 August 2009

Note to the Reader and End-User:

This document is provided for information only and is © Alta Data Technologies LLC 2009. While Alta strives to provide the most accurate information, there may be errors and omissions in this document. Alta disclaims all liability in document errors and any product usage. By using an Alta product, the customer or end user agrees (1) to accept Alta's Standard Terms and Conditions of Sale, Standard Warranty and Software License and (2) to not hold Alta Members, Employees, Contractors or Sales & Support Representatives responsible for any loss or legal liability, tangible or intangible, from any document errors or any product usage.

The product described in this document is not US ITAR controlled. Use of Alta products or documentation in violation of local usage, waste discard and export control rules, or in violation of US ITAR regulations, voids product warranty and shall not be supported. This document may be distributed to support government programs and projects. Third party person, company or consultant distribution is not allowed without Alta's written permission.

AltaCore, AltaCore-A429, AltaCore-ARINC, AltaAPI, AltaView and *AltaRTVal* are Trademarks of Alta Data Technologies LLC, Rio Rancho, New Mexico USA

Contact:

We welcome comments and suggestions. Please contact us at 888-429-A429 (toll free in US) or 505-994-3111 or visit our web site for support submit forms at www.altadt.com or email us at alta.info@altadt.com or alta.support@altadt.com.

PCCARD Connector

PCCARD Connector Pin-outs

Table 2. J1- 68-pin Connector

J1 Pin#	Signal	Cable Color Code(Solid/Band)	J1 Pin#	Signal	Cable Color Code(Solid/Band)
1	RX1+/TX1+	Black/Red	35	N/C	N/C
2	RX1-/TX1-	Red/Black	36	N/C	N/C
3	RX2+/TX2+	Black/White	37	N/C	N/C
4	RX2-/TX2-	White/Black	38	N/C	N/C
5	RX3+/TX3+	Black/Green	39	N/C	N/C
6	RX3-/TX3-	Green/Black	40	N/C	N/C
7	RX4+/TX4+	Black/Blue	41	N/C	N/C
8	RX4-/TX4-	Blue/Black	42	N/C	N/C
9	RX5+	Black/Yellow	43	N/C	N/C
10	RX5-	Yellow/Black	44	N/C	N/C
11	RX6+	Black/Brown	45	N/C	N/C
12	RX6-	Brown/Black	46	N/C	N/C
13	RX7+	Black/Orange	47	N/C	N/C
14	RX7-	Orange/Black	48	N/C	N/C
15	RX8+	Red/White	49	N/C	N/C
16	RX8-	White/Red	50	N/C	N/C
17	GND	Green/Red	51	N/C	N/C
18	~AutoTest	N/C	52	Discrete 1	Green/Blue
19	TRIG_IN1	Red/Green	53	N/C	N/C
20	TRIG_OUT1	Red/Blue	54	Discrete 2	Blue/Green
21	GND	Blue/Red	55	N/C	N/C
22	RS-485_1+	Red/Yellow	56	N/C	N/C
23	RS-485_1-	Yellow/Red	57	N/C	N/C
24	RS-485_2+	Red/Brown	58	N/C	N/C
25	RS-485_2-	Brown/Red	59	N/C	N/C
26	EXT TTL IO	Red/Orange	60	N/C	N/C
27	GND	Orange/Red	61	N/C	N/C
28	IRIG In	Green/White	62	N/C	N/C
29	IRIG GND	White/Green	63	N/C	N/C
30	JTAG PWR	N/C	64	N/C	N/C
31	JTAG CLK	N/C	65	N/C	N/C
32	JTAG TMS	N/C	66	N/C	N/C
33	JTAG TDI	N/C	67	N/C	N/C
34	JTAG TDO	N/C	68	N/C	N/C

PCCARD Connector Info

Figure 1. PCCARD-A429 Connector Facing the Card



PCCARD Connector

Backshell: #191-000002-010

Honda Connector: #HDRA-68BA

Arinc-717 Operation

TX Operation

When a channel is set to transmit in Harvard Bi-Phase mode, this forces a TX channel pair (channels 1&2 and 3&4 pairs) to differentially drive the 0-5V positive leg of the ARINC-429 drivers. The odd channel is the positive differential signal and the even channel leg is the negative differential signal used to create the Harvard Bi-Phase 717 encoding. This setting is provided for older ARINC-717 DFDRS systems. This setting ONLY applies to the first four TX channels.

Table 3. TX Connections for ARINC-717 operation

J1 Pin#	Signal	Cable Color Code(Solid/Band)
1	A717 TX1+	Black/Red
2	N/C	N/C
3	A717 TX1-	Black/White
4	N/C	N/C
5	A717 TX2+	Black/Green
6	N/C	N/C
7	A717 TX2-	Black/Blue
8	N/C	N/C

RX Operation

When a channel is set to receive in Harvard Bi-Phase mode, the same connector inputs are used as when operating in standard ARINC-A429 mode. This ONLY applies to the first two RX channels. See the ARINC (RX & TX) Protocol Engine Specifications-Users Manual more for information on setting the channel to operate in Harvard bi-phase mode.